

# **WorldPenScan**

## **User Manual**

Version: V1.0 Mac (tw)  
Release: March, 2010

# **Penpower Technology Ltd.**

## **Software User License Agreement**

You are licensed to legally use this software program (“the Software”) by Penpower Technology Ltd (“Penpower”) under this license agreement (“The Agreement”). If you do not agree with any of the provisions in this Agreement, please do not install, copy or use the Software. By using the Software, you are deemed to fully understand and accept the provisions of this Agreement.

### **1. Intellectual Property**

All intellectual property rights in the Software, together with all information and documents included in the packaging for the Software (including but not limited to copy-rights), are property of Penpower, and are protected by relevant laws and regulations.

### **2. License to Use**

You are authorized to use the Software on one (1) single computer only. You may not use the Software on any other machines other than the said single computer.

### **3. Authority to Copy**

The Software and all documents included with the Software, and copyright thereof, are property of Penpower. You are licensed to make one (1) copy of the Software for your personal backup purposes. All other acts of copying are strictly prohibited.

You may not sell, lease, disassemble, reverse engineer, copy, translate, adapt or derive the Software, or obtain the source code of the Software by any other means. You may not use the Software for any purposes other than those permitted under this Agreement.

### **4. Business Users**

If you need to install or use the Software on more than one (1) computer, please contact Penpower or our local distributor to purchase a license for the additional use.

### **5. Liability**

You agree to indemnify Penpower against all losses, costs, debts, settlement payments or other expenses (including but not limited to attorneys fees) arising from your breach of this Agreement, and you agree to compensate Penpower for all of the abovementioned damages.

### **6. No Warranty**

Effectiveness of a packaged software in handling information is closely related to its software and hardware environment. The Software is published following careful development and product testing by Penpower, but Penpower is not able to conduct tests based on all possible combinations of software and hardware environment. Therefore, Penpower is unable to promise nor warrant that there will be absolutely no risk of loss or damage of information, or any other kind of loss, during installation and/or execution of the Software. You must be fully aware of your risks in using the Software.

Penpower will provide you with the Software and support services in respect of the Software to the maximum extent permitted by law. However, Penpower does not warrant that the Software and information included in the package of the Software contain no defects or errors. Penpower is not liable for any indirect, special or incidental loss arising from the Software, including but not limited to loss of profits, damage to business reputation, cessation of work, hardware malfunction or damage, or any other commercial damage or loss arising from commercial use of the Software.

#### **7. Limitation of Liability and Damages**

The maximum amount of compensation payable by Penpower, in respect of any damage incurred by you for any reason under this Agreement, is limited to the amount you have already paid to Penpower in respect of the Software.

Under no circumstances will Penpower be held liable for the possibility of loss, notwithstanding Penpower may be aware of the possibility of such loss.

#### **8. Prohibition Against Sublicense**

You are prohibited to assign the license in respect of the Software granted to you under this Agreement, or to grant a sublicense to another person.

#### **9. Jurisdiction**

With regards to any disputes arising from this Agreement, Penpower and you agree that the court having jurisdiction over the business location of Penpower will be the court in the first instance.

#### **10. Miscellaneous**

In the event that any provision of this Agreement is found to be invalid at law, such invalidity will not affect the validity of any other provisions, or the legal enforceability of such other provisions.

In the event that the Software cannot be executed under conditions of normal use, due to any damage to the original disk/s, Penpower will replace the disk/s free of charge.

# Contents

<b>Chapter 1 Product Introduction .....</b>	<b>1-1</b>
1.1 Introduction .....	1-1
1.2 Features .....	1-1
<b>Chapter 2 Getting Started.....</b>	<b>2-1</b>
2.1 System Requirements .....	2-1
2.2 Hardware Specification .....	2-1
2.3 Software Installation .....	2-2
2.4 Launching WorldPenScan .....	2-4
2.5 Registration .....	2-4
2.6 Scanning Guide .....	2-4
<b>Chapter 3 Scanning and Settings.....</b>	<b>3-1</b>
3.1 WorldPenScan Toolbar .....	3-1
3.2 Scan Mode .....	3-2
3.2.1 Sentence Scan .....	3-2
3.2.2 Word Scan .....	3-2
3.2.3 Image Scan .....	3-3
3.3 Online Translation .....	3-4
3.4 Original Image .....	3-5
3.5 Settings .....	3-5
3.5.1 General Settings .....	3-5
3.5.2 Recognition Settings .....	3-7
3.5.3 Online Translation Settings .....	3-8

There may be newer versions of the software that was released during or after this product's manufacturing date. If the content in the User Manual differs from the on-screen interface, please follow the instructions on the on-screen interface instead of the User Manual.

# Chapter 1 Product Introduction

## 1.1 Introduction

WorldPenScan, the best input device, scans and recognizes Chinese, English, Japanese, Korean, French, German, Italian and Spanish into your computer via the USB interface. Whenever you come across any particular words or sentences that you do not understand, WorldPenScan will scan for you.

With an ergonomic design, WorldPenScan provides a comfortable handle which fits all left and right-handed users. Scan away effortlessly with the transparent scan tip. Where you see, where you scan.

## 1.2 Features

- **The Best Input Device**

Unlike the complicated process of the traditional scanner, WorldPenScan provides the easiest way for inputting words. Multi-thread architecture allows you to scan continuously without pause while recognition is being done on the fly.

- **Multiple Language Recognition System**

The adjustable multiple language recognition system provides Traditional Chinese, Simplified Chinese, Hong Kong characters, English, Japanese, Korean, French, German, Italian and Spanish recognition languages.

- **Automatic Tilt Calibration**

Auto-detect and calibrate the tilt angle of the scanned pictures to improve the recognition accuracy.

- **Online Translation**

The manageable online translation menu is attached on the toolbar. You can set up the translation website for translating instantly.

- **A Brand New Ergonomic Design**

Provide a comfortable handle which fits all left and right-handed users. Scan away effortlessly with its transparent scan tip. Where you see, where you scan. The stand alone USB cable can prevent cable damage and connection problems.

- **Scan Image**

The new feature of scanning images lets you scan and save the important images into MS Word files.



## Chapter 2 Getting Started

### 2.1 System Requirements

- Intel based Mac
- Mac OS X 10.5 version or later version
- USB port

### 2.2 Hardware Specification

- Dimensions: 130mm x 37mm x 18.5mm
- Weight: 30g (excluding USB Adapter)
- Interface: USB 2.0
- Scanning speed: 15 cm/sec.
- Character size: 5~22 pt




#### ***Function button:***

While scanning text or images, clicking the function button will function as the **[Enter]** key on the keyboard. In the **[Word Scan]** mode, the function key can be used to send the next word.




## 2.3 Software Installation


1. Insert the **WorldPenScan** setup CD into the CD-ROM drive. Run the **Setup** and click **[WorldPenScan]** on the Installation window to install **WorldPenScan**.

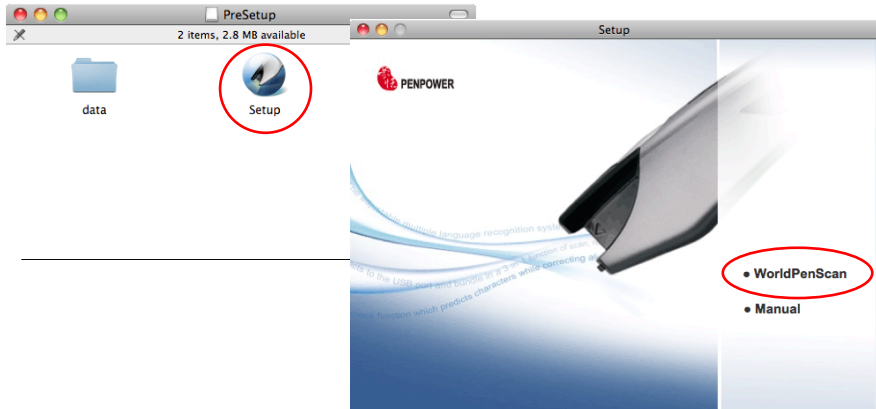


2. Please click **[Continue]** to install.

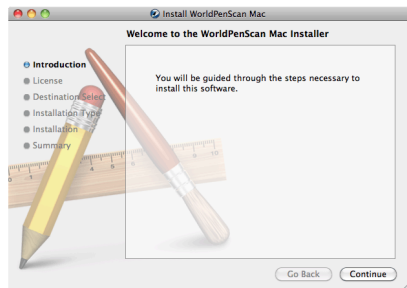


3. Please read the License Agreement, and click **[Continue]**.

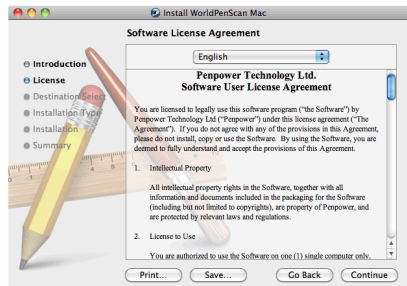


4. Click **[Agree]** to accept the license agreement.

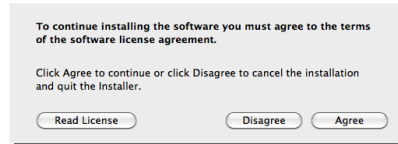

5. Confirm the installation location and click **[Install]** to continue.

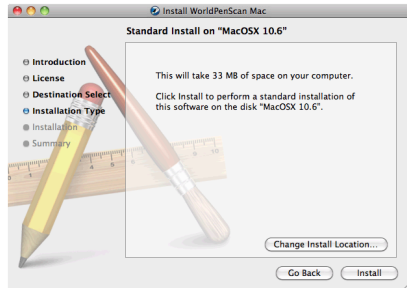


6. Click **[Close]** to finish the installation process.

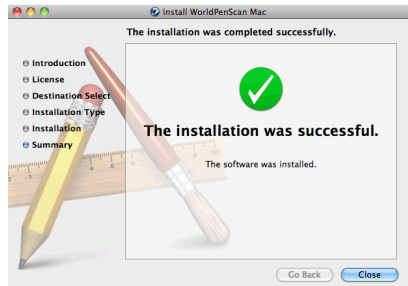



## 2.4 Launching WorldPenScan

Run [Go/Applications/WorldPenScan Mac/WorldPenScan] to launch WorldPenScan.

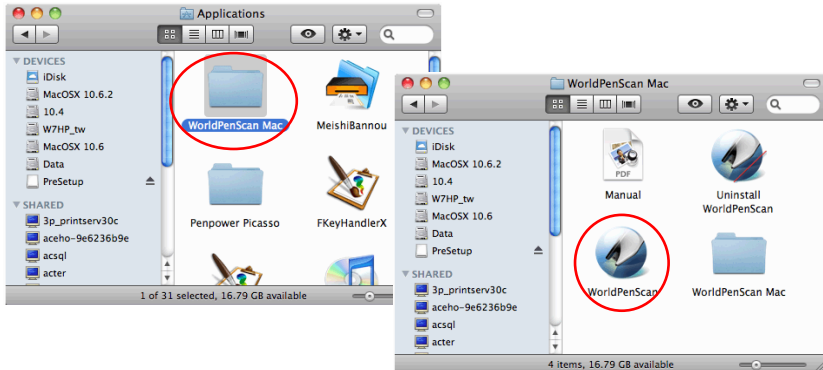

## 2.5 Registration

When you first time run the **WorldPenScan**, a registration reminder will appear. Please click on **[Register now]** to register and ensure the warranty service. You can also click **[Register later]** to close the reminder. When you need to register, click the **[Tools]** button and select **[About]** from the toolbar and then click on **[Register]**.


*Tip: If you do not need to be reminded again, you can check [Don't show this page at startup].*



## 2.6 Scanning Guide


A **Scanning Guide** will appear after the registration reminder. Use the **WorldPenScan** as the guide directs.

*Note: If you would not like to read the message again, you can check [Do not display this scanning guide next time], and click [OK].*

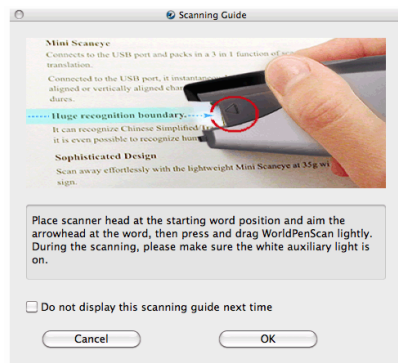

## Chapter 3 Scanning and Settings

### 3.1 WorldPenScan Toolbar

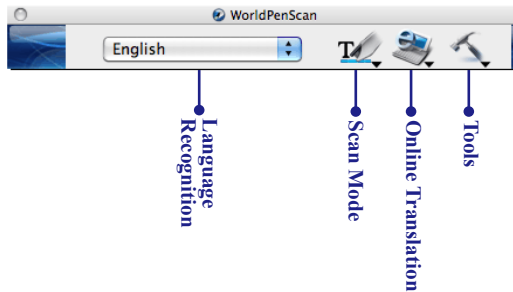






1. **Language Recognition: WorldPen-Scan** can recognize Chinese(Simplified), Chinese (Traditional), English, French, German, Italian, Japanese, Korean and Spanish text. Click up and down button and select the language you would like to scan.



**Note:** *The Language Recognition must match the language of the content for optimal accuracy.*

2. **Scan Mode:** Provide [Sentence Scan]  and [Word Scan]  modes.

- **Sentence Scan** : [Sentence Scan]  mode is the default scan mode for scanning an article or a sentence directly. The scanned article or sentence will be recognized into text and sent to your computer. Please refer to 3.2.1 Sentence Scan for detailed information.
- **Word Scan** : When you want to scan a word or check the meaning or translation of one word, you can click the [Scan Mode] button to select [Word Scan]  mode, and scan a word or a sentence, and then select a word to input or check the meaning or translation. Please refer to 3.2.2 Word Scan for detailed information.

3. **Online Translation** : Provide a translation function in which you can assign a translation website to translate the scanned words. Please refer to 3.3 Online Translation for detailed information.


4. **Tools:** Provide Image Scan, Original Image, Settings, Help and About.



- . **Image Scan:** Select the [Image Scan] option, the scanned image or word will be sent to your cursor location in image format. Please refer to 3.2.3 Image Scan for detailed information.
- . **Original Image:** Display the scanned image. See 3.4 Displaying Original Image.
- . **Settings:** Provide General, Recognition Setting and Online Translation settings. See 3.5 Settings for detailed information.


## 3.2 Scan Mode

### 3.2.1 Sentence Scan


1. Select the [Sentence Scan]  mode from the [Scan Mode].
2. Select the language of the text that you desire to scan from the [Language Recognition].
3. Open any word processor, for example Text Edit, and then click the cursor location where you want to input.
4. Place a document on a flat surface and place the scan tip at the front of your desired scan area. Aim the Scan Tip arrow at the center of the desired scan area, and then press and drag the **WorldPenScan** pen in a straight line across the area like a highlighter. During the scanning, please make sure the white auxiliary light is on.
5. Stop applying pressure to the pen to stop scanning. The text that the pen has scanned are displayed in your word processor immediately.


***Note:** Penpower WorldPenScan is able to scan and recognize one row of characters at a time. Please place the Scan Tip arrow at the center of the line.*


### 3.2.2 Word Scan

1. Click the [Scan Mode] button to select the [Word Scan]  mode, an extension window will appear under the tool-bar.


***Tip:** When first time switching to the Word Scan mode, the Word Scan Guide window will appear to guide you how to use the Word Scan mode.*

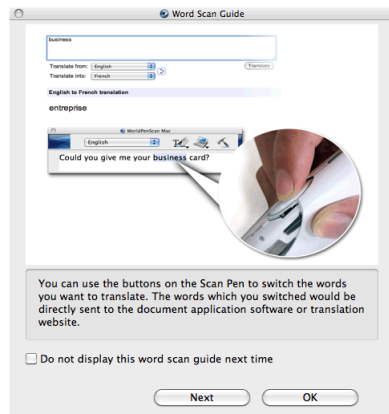

2. Select the language of the text that you desire to scan from the **[Language Recognition]**.
3. Open any word processor, for example Text Edit or click the **[Online Translation]**  button to open a translation website. And then click the location where you want input.
4. Place a document on a flat surface and place the scan tip in front of the word you desire to check. Aim the arrow at the desired word, then press and drag the **WorldPenScan** pen in a straight line across the word. During the scanning, please make sure the white auxiliary light is on.
5. Stop applying pressure to the pen to stop scanning. The first recognizable word will be sent to the desired word processor or translation website. The meaning or translation will be displayed in the translation website as well.
6. If you scan more than one word, you can press the **[Function Button]** on the **WorldPenScan** pen to choose next recognizable word or use your mouse to highlight a word from the extension window, the selected word will be sent to the **cursor location**. So you can literally check the meaning or translation of your choice.



### 3.2.3 Image Scan



1. Click **[Tools]**  button and select the **[Image Scan]** option from the drop-down menu.
2. Open a word processor that is able to input images, for example Text Edit. Click the location where you want to input the scanned images.
3. Place a document on the a flat surface and place the scan tip at the starting word or picture and aim the Scan Tip arrow at the center of the scan area, then press and drag the scan pen in a straight line. The white auxiliary light from the Scan Tip indicates the pen is scanning.
4. Stop applying pressure to the pen to stop scanning. The scanned image will be displayed in your word processor immediately.





### 3.3 Online Translation

WorldPenScan provides **[Online Translation]**  function for you to translate words or sentences.


1. Select the **[Language Recognition]** which matches the scanning words.
2. Click the **[Online Translation]**  and then select the any online translation Website. The online translation Website will be opened, and **WorldPenScan** will be switched to the **[Word Scan]**  mode automatically.

*Tip: You can organize Website Links from the Translation Settings function. Please refer to 3.4.3 Online Translation Settings for detailed information.*


3. Place a document on a flat surface and place the scan tip at the starting word. Aim the scan tip arrow at the center of the desired area, the press and drag the scan pen in a straight line. The white auxiliary light from the Scan Tip indicates the pen is scanning.
4. The translation result of the first recognized word displays in the Website.


*Note: If the Website does not support the enter function, please manually click the translate button on the website with your mouse.*

5. If you scan more than one word, you can press the **[Function button]** on the scan pen to see the translation of the next recognizable word. You can also use your mouse to highlight a word from the extension window, the selected word will be sent to the cursor location for translating.

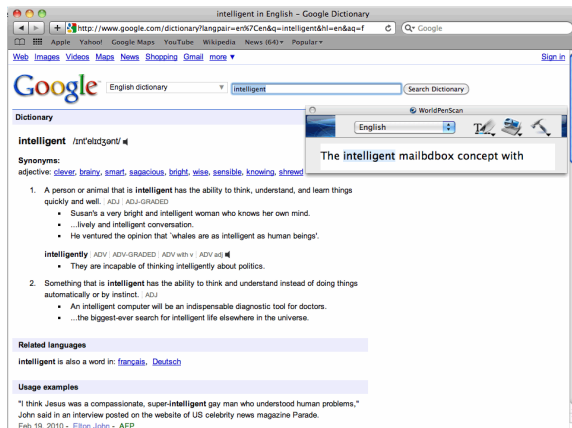


### 3.4 Original Image

Click [Tools]  button and select the [Original Image] option from the drop-down menu to open the [Original Image] window. After scanning, the [Original Image] window displays the scanned image. You can check the scanned image to compare with the original text. This can help you improving your scan technique for more accurate recognition results.

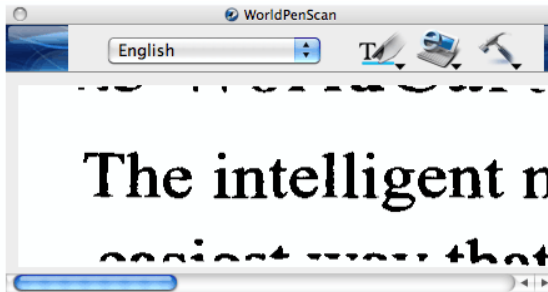

*Tip: You can click on the original image to save the image file.*

### 3.5 Settings

Click [Tools]  from the toolbar and select [Settings] from the drop-down menu to set up the general, recognition and online translation settings.


#### 3.5.1 General Settings

In the [General] setting page, you can set up the scan direction and left/right-handed.

##### Scan Direction

WorldPenScan must be used to scan the characters in consistent direction, any changes to the direction will cause inaccurate recognition results.

When choosing Chinese(Traditional), Chinese(Simplified), Japanese or Korean as the language recognition, you can accord to the document you want to scan to choose the scan direction manually.

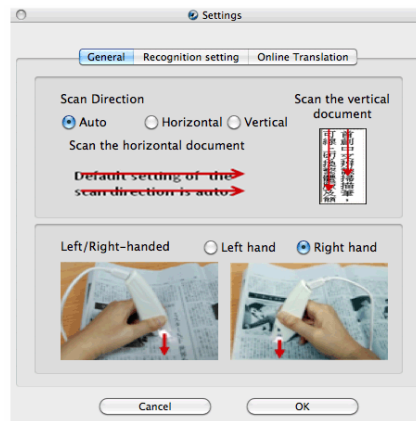



## Scanning Horizontal Text

When scanning horizontal text, you can choose the **[Horizontal]** option. Place the pen on the text or image, move the pen left-to-right or right-to-left when scanning.



**Left hand:**  
Scan from right-to-left or from left-to-right



**Right hand:**  
Scan from left-to-right or from right-to-left

*Note: Penpower WorldPenScan is able to scan and recognize one row of characters at a time. Please place the pen in such a manner so that the Scan Tip arrow is at the center of the line of text.*

## Scanning Vertical Text

When scanning vertically aligned text, you can choose **[Vertical]** and then select **[Left-hand]** or **[Right-hand]**. You may scan the text in a straight top-to-bottom fashion. Align the Scan Tip arrow on your pen to the center of the characters.



**Left Hand**



**Right Hand**


*Note: The Left/Right-handed option only available when you select the vertical direction.*

### 3.5.2 Recognition Settings

In the **[Recognition Setting]** page, you can set up the recognition results, recognition contents and at the end of scan, insert a space automatically.

#### Recognition Results

When choosing Chinese(Traditional) or Chinese(Simplified) as the language recognition, you can choose to output the recognized characters in Chinese Traditional or Chinese Simplified.

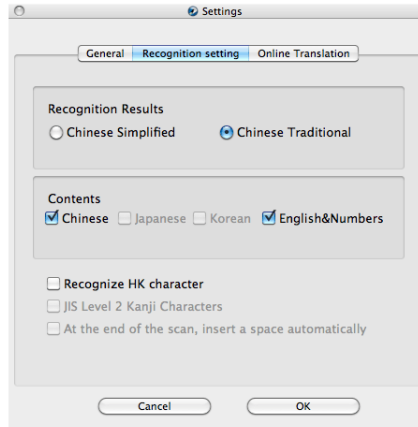

#### Recognition Contents

When choosing Chinese(Traditional), Chinese(Simplified), Japanese or Korean as the language recognition, you can choose to recognize the characters in Chinese/Japanese/Korean or English & Numbers.

For example, when the document you want to scan does not contain English & Numerics, you may only check Chinese, Japanese or Korean for higher recognition accuracy.

#### Recognize HK Character

When choosing Chinese(Traditional) as the language recognition, you can check the **[Recognize HK Character]** to recognize Hongkong characters. If you do not need to recognize Hongkong characters, please do not check it for higher recognition accuracy.

#### JIS Level 2 Kanji Characters

When choosing Japanese as the language recognition, you can check the **[JIS Level 2 Kanji Characters]** to recognize the JIS level 2 Kanji characters. If you do not need to recognize JIS level 2 Kanji characters, please do not check it for higher recognition accuracy.

#### At the End of the Scan, Insert a Space Automatically

When choosing English, French, German, Italian or Spanish as the language recognition, you can check the **[At the end of the scan, insert a space automatically]**. While scanning text, the system will automatically add a space at the end of the scan.





### 3.5.3 Online Translation Settings

In the **[Online Translation]** setting page, you can add, remove, and modify online translation websites. The websites will be shown under the **[Online Translation]** button on the toolbar.

Click the **[Add]** button to open the Translation Website Setup window. Input the translation website name and its URL address, then click **[OK]**. You can also modify or remove a website by clicking the **[Modify]** button or the **[Remove]** button.

You will find the changes when clicking **[Online Translation]** button from the toolbar.

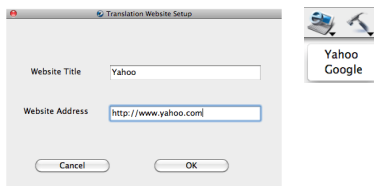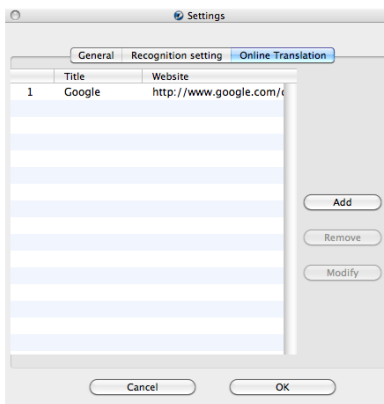

# **WorldPenScan V1.0 Mac (tw) User Manual**

Release: March, 2010

Penpower Technology Ltd.